



E01

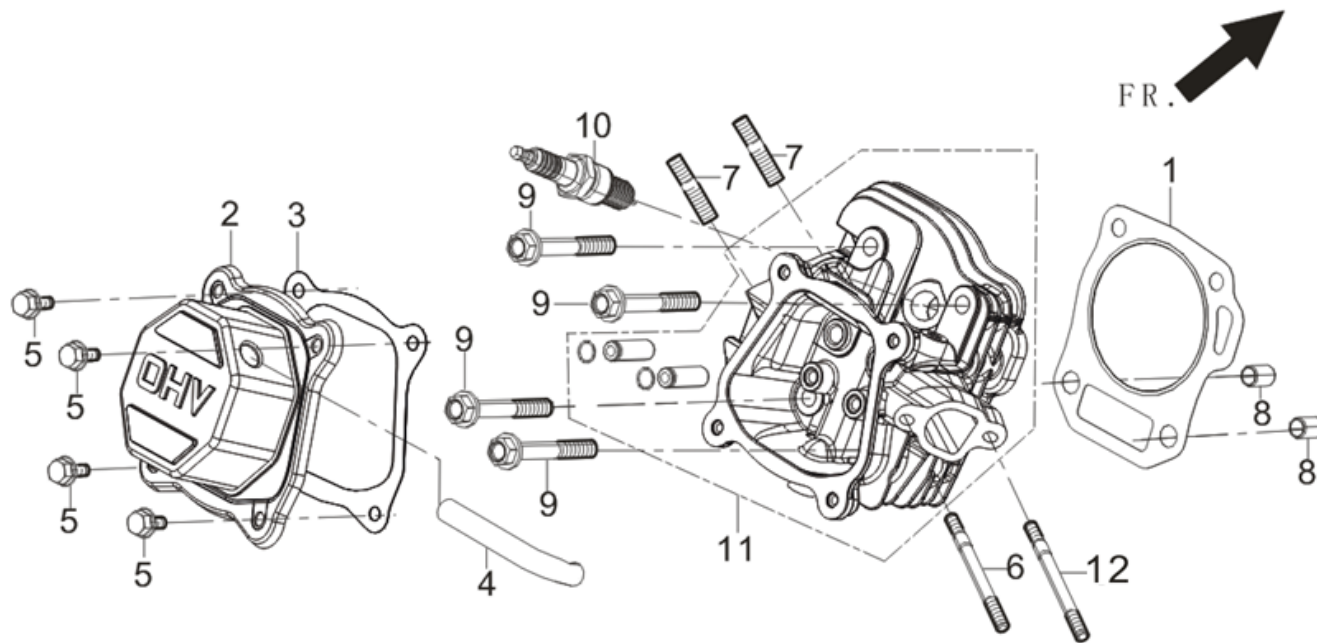


POS.	CODE	DESCRIPTION	QTY
E01-1	A08294	CYLINDER HEAD GASKET	1
E01-2	A08291	CYLINDER HEAD COVER	1
E01-3	A08292	CYLINDER HEAD COVER GASKET	1
E01-4	A09913	BREATHER TUBE	1
E01-5	A08968	BOLT	4
E01-6	A11338	STUD BOLT	1
E01-7	A08489	STUD BOLT	2
E01-8	A08943	POSITION PIN	2
E01-9	A08293	CYLINDER HEAD BOLT	4
E01-10	A08940	SPARK PLUG	1
E01-11	A08290	CYLINDER HEAD	1
E01-12	A08489	STUD BOLT	1

E02

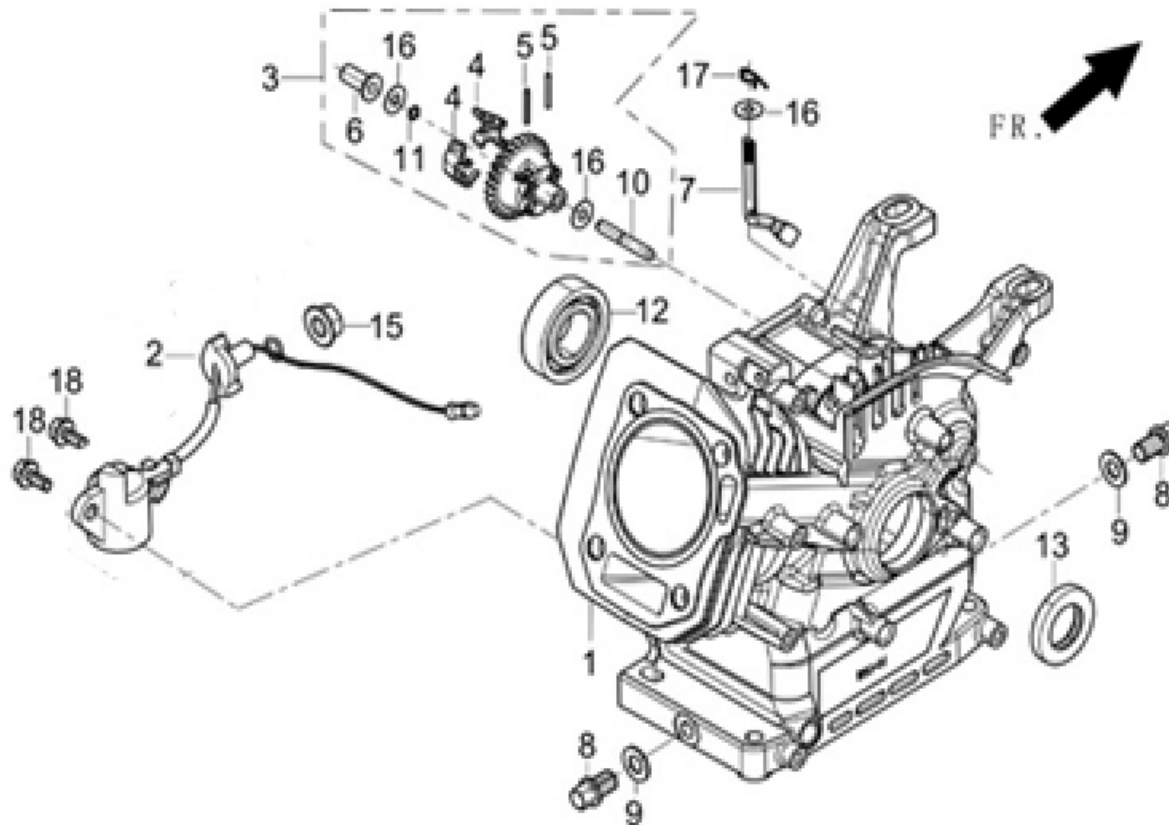

POS.	CODE	DESCRIPTION	QTY
E02-1	A13066	CRANKCASE	1
E02-2	A08608	ENGINE OIL SENSOR	1
E02-3	A09908	GOVERNOR GEAR	1
E02-7	A08481	GOVERNOR ARM	1
E02-8	A08287	DRAIN PLUG BOLT	2
E02-9	A08482	WASHER	2
E02-12	A08484	DEEP GROOVE BALL BEARING	1
E02-13	A08483	OIL SEAL	1
E02-15	A08485	NUT	1
E02-16	A08610	FLAT WASHER	1
E02-17	A08951	COTTER PIN	1
E02-18	A08852	BOLT	2


E03

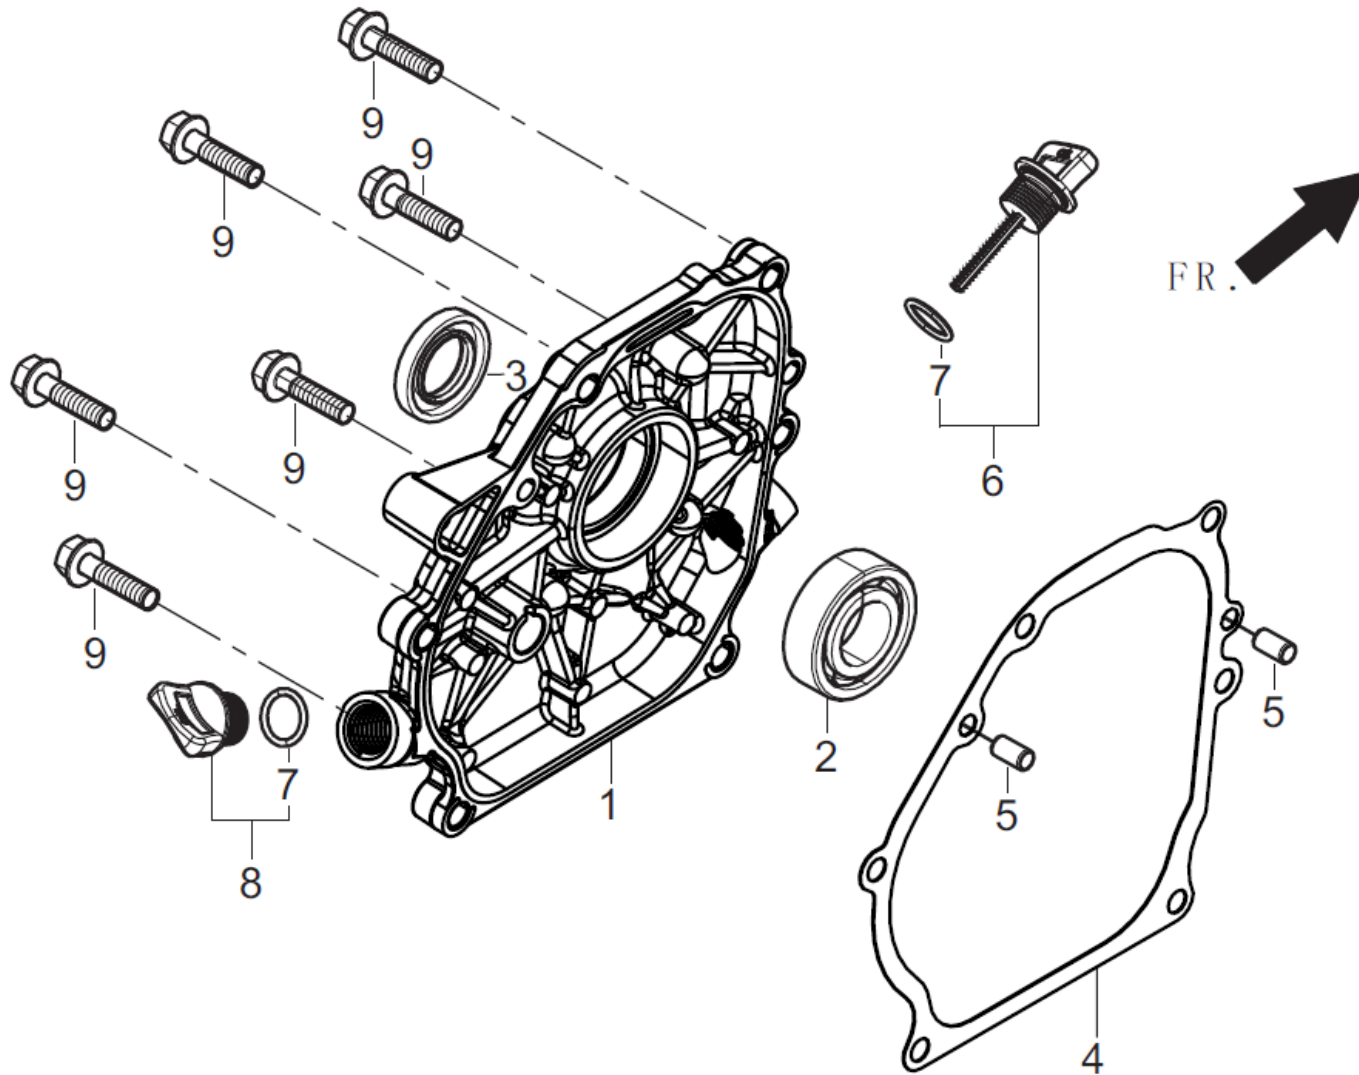


POS.	CODE	DESCRIPTION	QTY
E03-1	A10785	CRANKCASE COVER	1
E03-2	A08484	DEEP GROOVE BALL BEARING	1
E03-3	A08483	OIL SEAL	1
E03-4	A08289	CRANKCASE GASKET	1
E03-5	A08486	POSITION PIN	2
E03-6	A08468	OIL DIPSTICK	1
E03-8	A09912	ENGINE OIL PLUG	1
E03-9	A08939	BOLT	6

POS.	CODE	DESCRIPTION	QTY
E04-1	A13073	CRANKSHAFT	1

E04

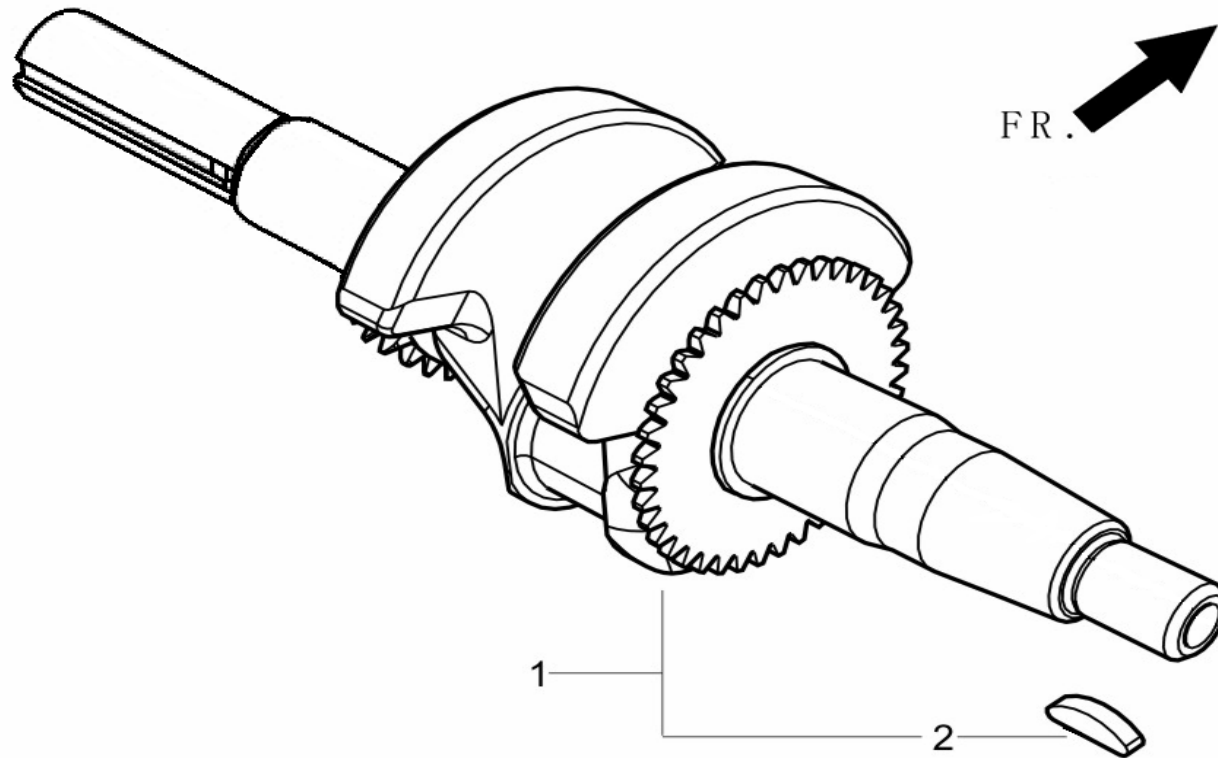


E05

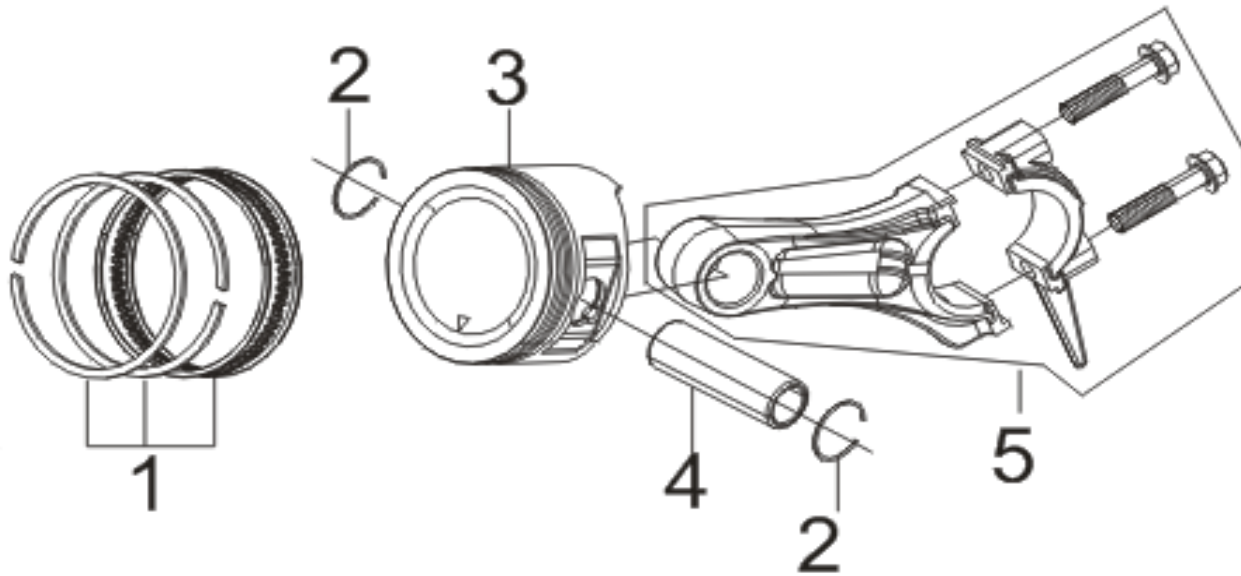


POS.	CODE	DESCRIPTION	QTY
E05-1	A08408	PISTON RING SET	1
E05-2	A08409	PISTON PIN CLIP	2
E05-3	A08295	PISTON	1
E05-4	A08296	PISTON PIN	1
E05-5	A08297	CONNECTING ROD	1

E06

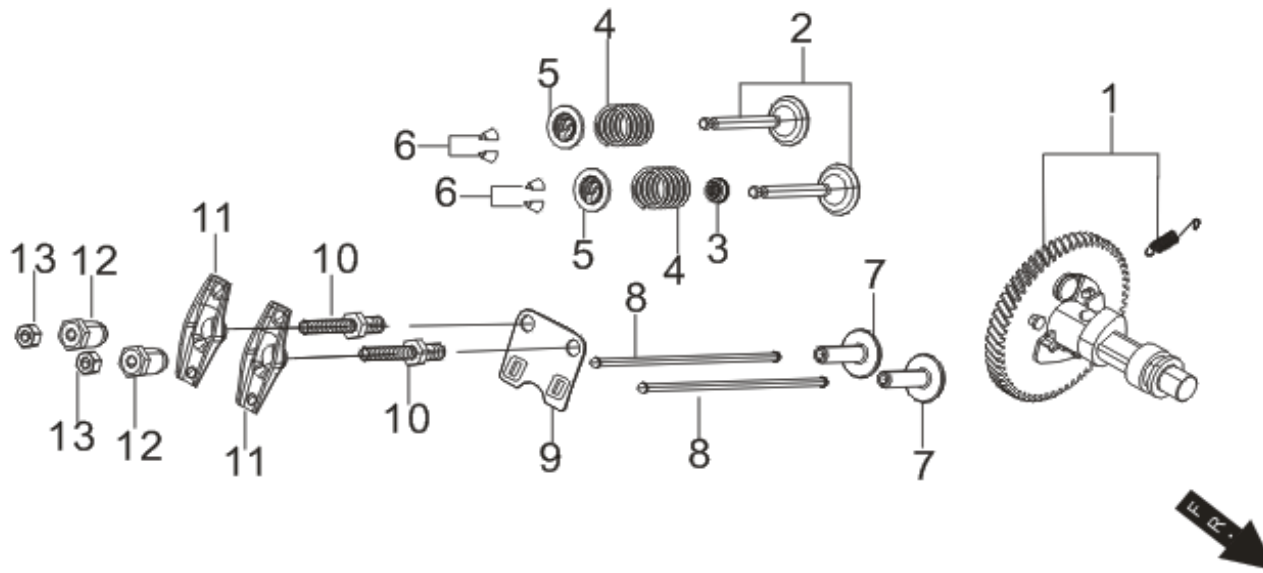


POS.	CODE	DESCRIPTION	QTY
E06-1	A08451	CAMSHAFT ASSEMBLY	1
E06-2	A08298	VALVES SET	1
E06-3	A08299	SEAL GUIDE	1
E06-4	A08300	VALVE SPRING	2
E06-5	A08301	VALVE SPRING SEAT	2
E06-6	A08302	VALVE LOCK CLAMP	4
E06-7	A08440	VALVE TAPPET	2
E06-8	A08441	VALVE LIFTER	2
E06-9	A08442	LIFTER STOPPER PLATE	1
E06-10	A08459	ROCKSHAFT BOLT	2
E06-11	A08460	ROCKER VALVE	2
E06-12	A08461	VALVE ADJUSTING NUT	2
E06-13	A08462	VALVE LOCK NUT	2

E07

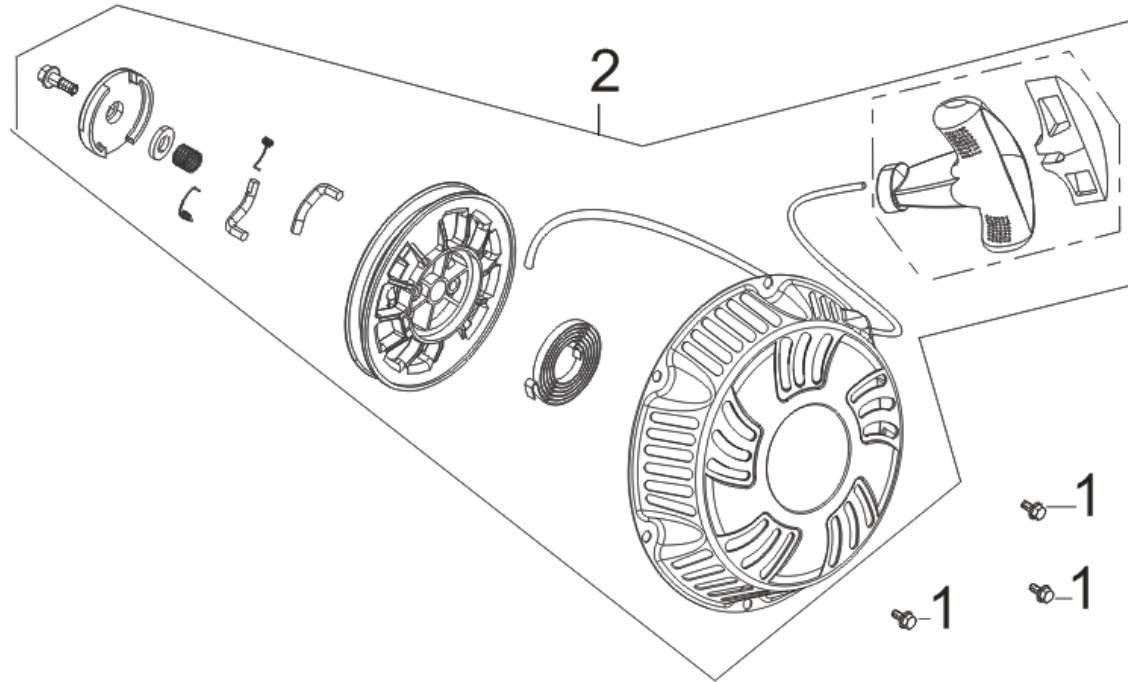


POS.	CODE	DESCRIPTION	QTY
E07-1	A08613	BOLT	3
E07-2	A13077	RECOIL STARTER ASSEMBLY	1

E08

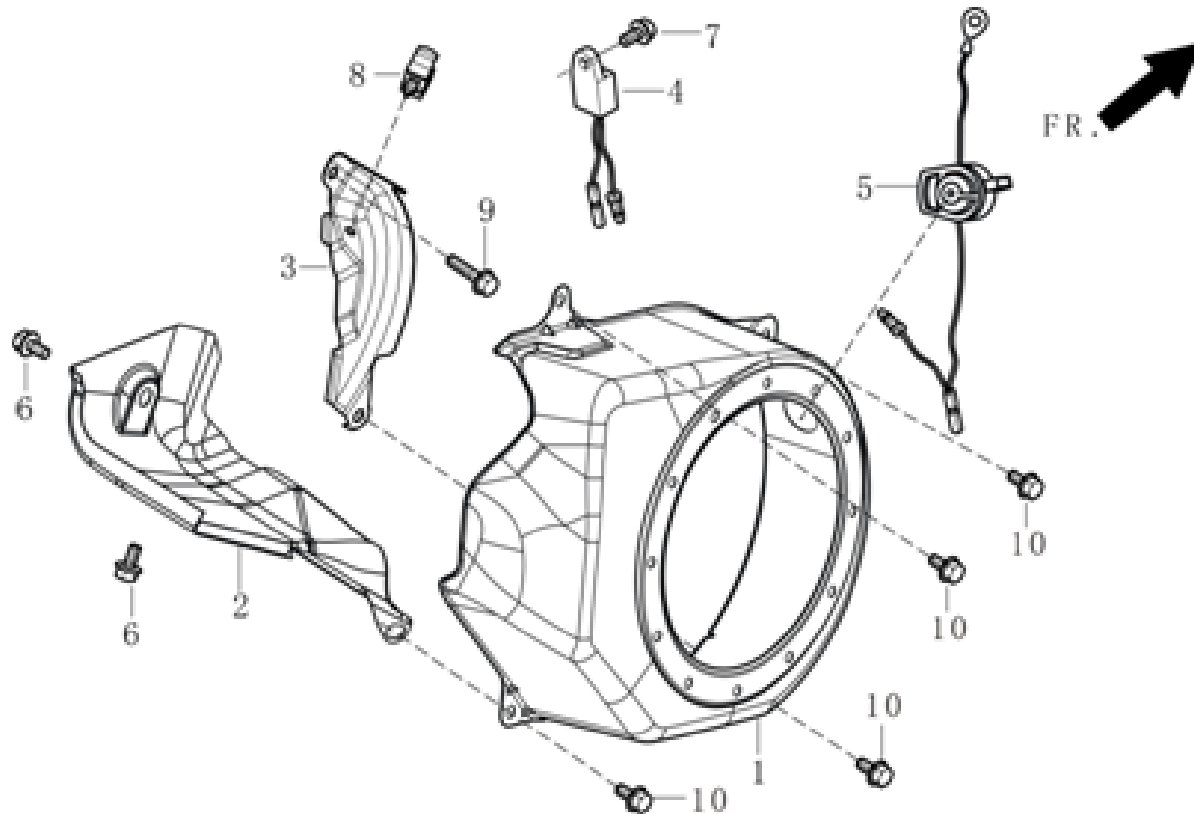


POS.	CODE	DESCRIPTION	QTY
E08-1	A13015	SHROUD	1
E08-2	A08491	CYLINDER BODY SHROUD	1
E08-3	A11198	LOWER SHIELD	1
E08-4	A08615	OIL PROTECTOR	1
E08-5	A11245	STOP ENGINE SWITCH	1
E08-6	A08494	BOLT	2
E08-7	A08494	BOLT	1
E08-8	A08495	COLLAR	1
E08-9	A08496	BOLT	1
E08-10	A08968	BOLT	4

E09

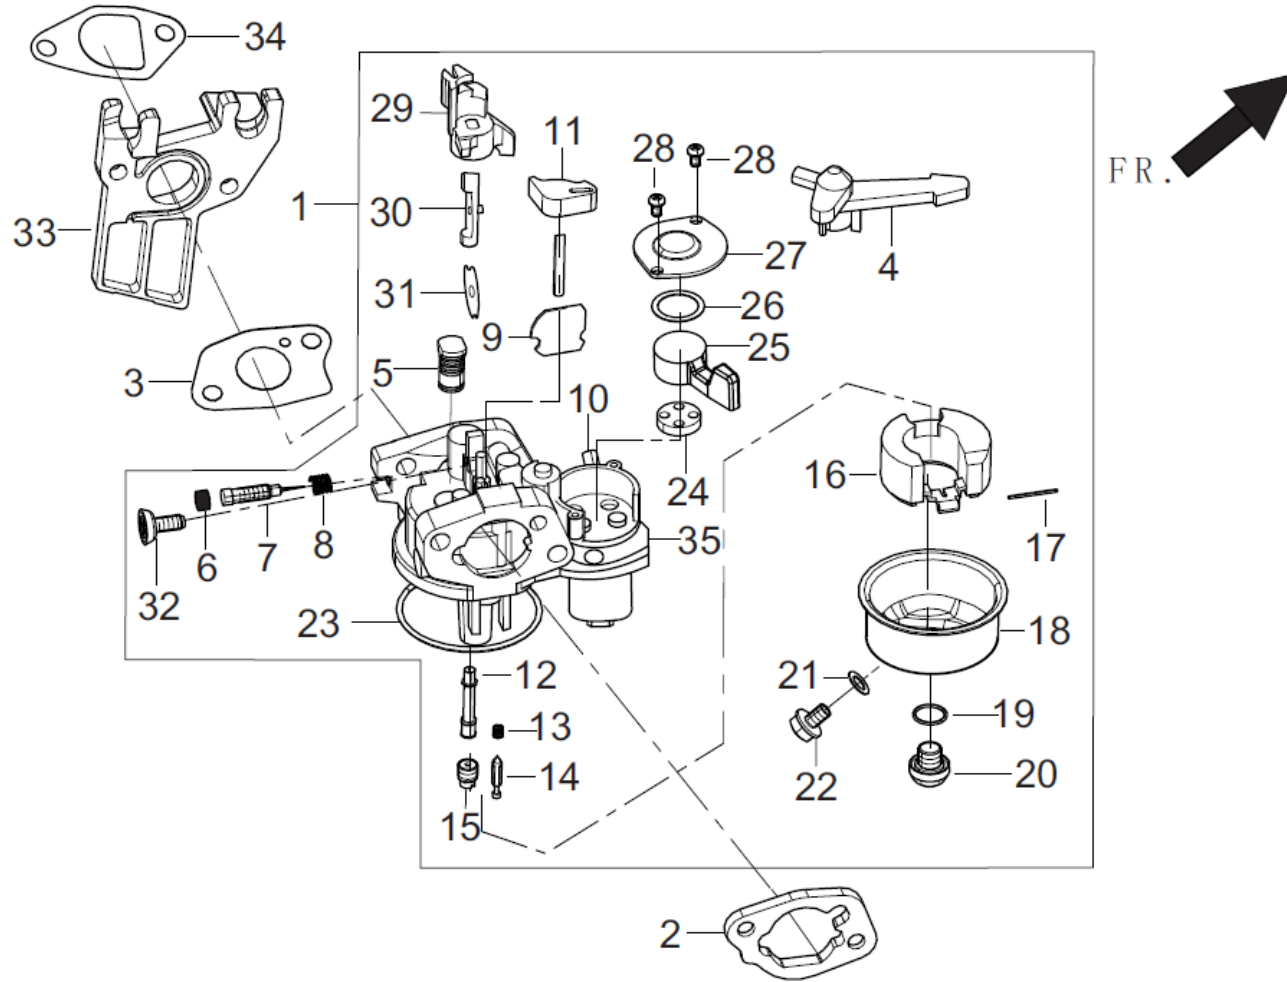


POS.	CODE	DESCRIPTION	QTY
E09-1	A13038	CARBURETOR ASSEMBLY	1
E09-2	A09924	AIR CLEANER SEAL GASKET	1
E09-3	A08469	CARBURETOR SEAL GASKET	1
E09-33	A08478	CARBURETOR INSULATOR PLATE	1
E09-34	A08470	CARBURETOR INSULATOR GASKET	1

E10

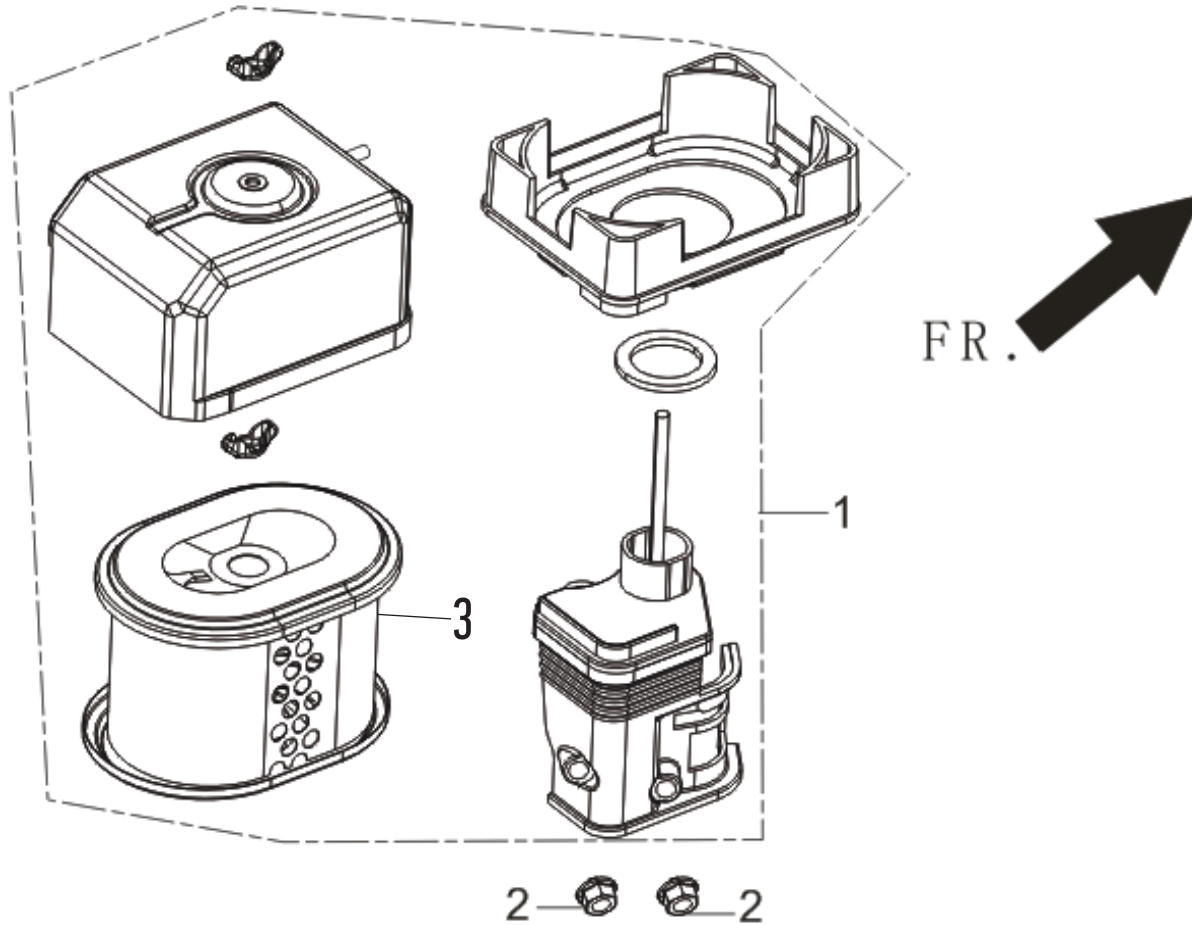


POS.	CODE	DESCRIPTION	QTY
F01-1	A13089	AIR FILTER	1
F01-2	A08506	NUT	2
F01-3	A10830	AIR FILTER ELEMENT	1

E11

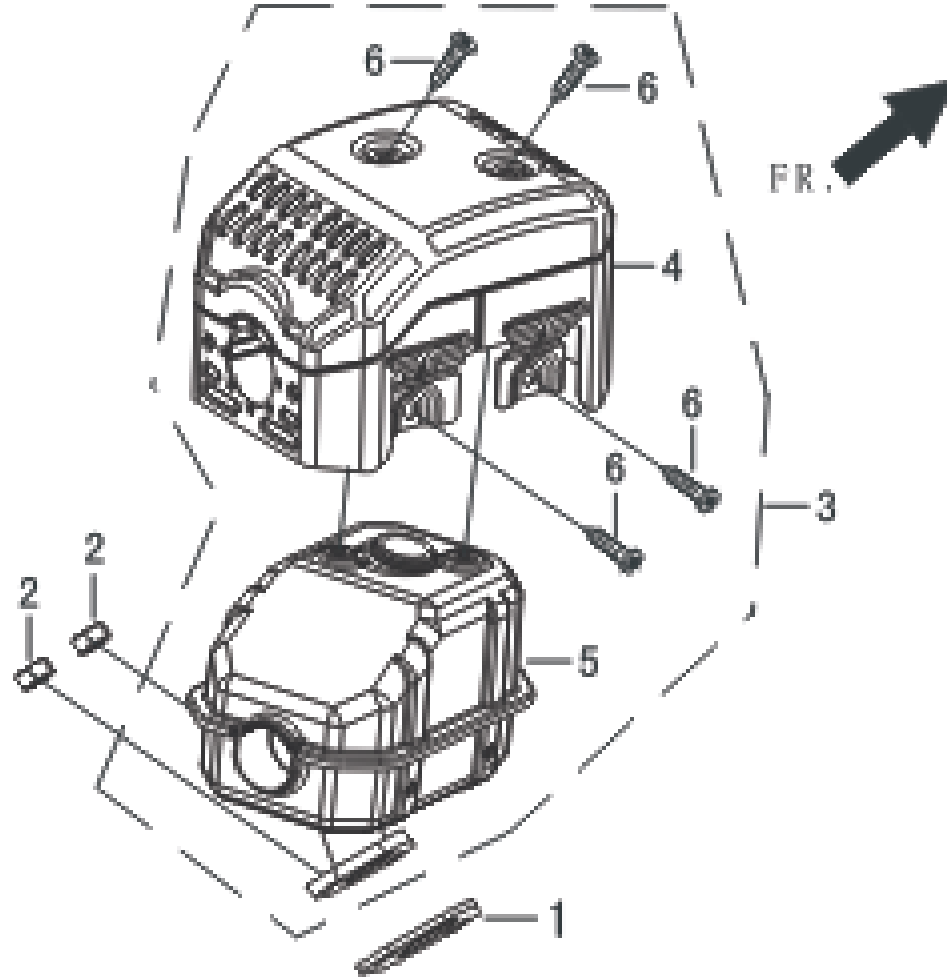


POS.	CODE	DESCRIPTION	QTY
E11-1	A08622	EXHAUST OUTLET GASKET	1
E11-2	A08747	NUT	2
E11-3	A13027	MUFFLER ASSEMBLY	1

E12

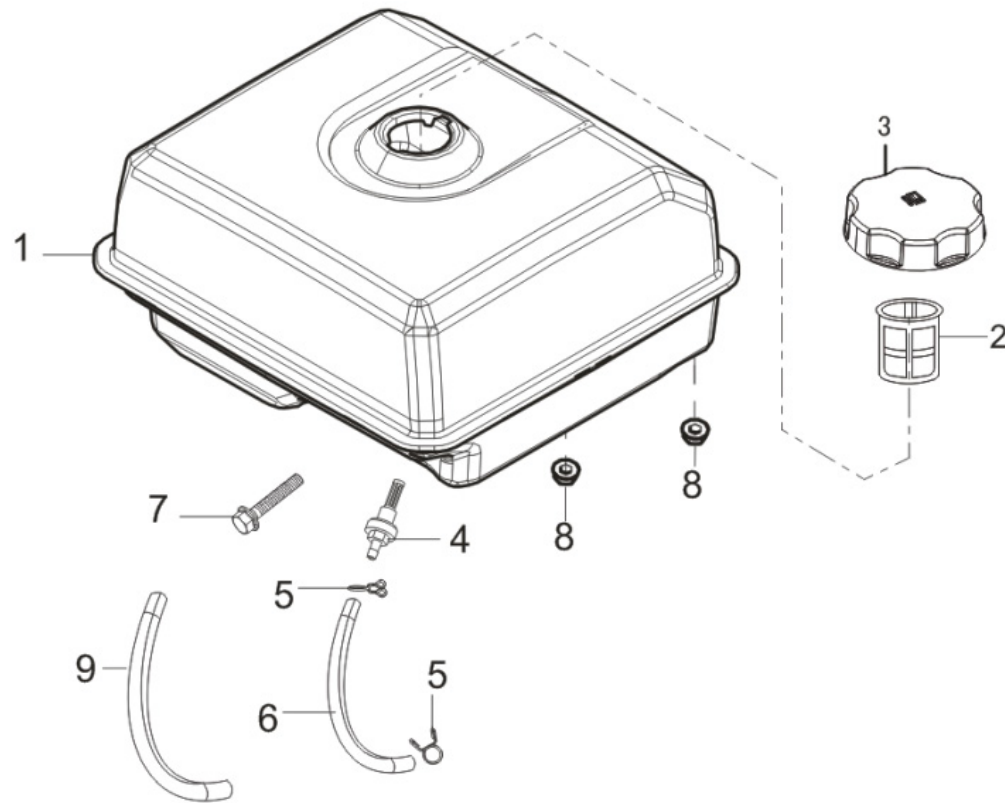


POS.	CODE	DESCRIPTION	QTY
E12-1	A13007	FUEL TANK	1
E12-2	A09932	FUEL STRAINER	1
E12-3	A11333	FUEL TANK COVER	1
E12-4	A09934	FUEL TANK OIL OUTLET	1
E12-5	A10752	COLLAR	2
E12-6	A09935	FUEL TUBE	1
E12-7	A08830	BOLT	1
E12-8	A08506	NUT	2
E12-9	A09936	RUBBER JACKET	1

E13

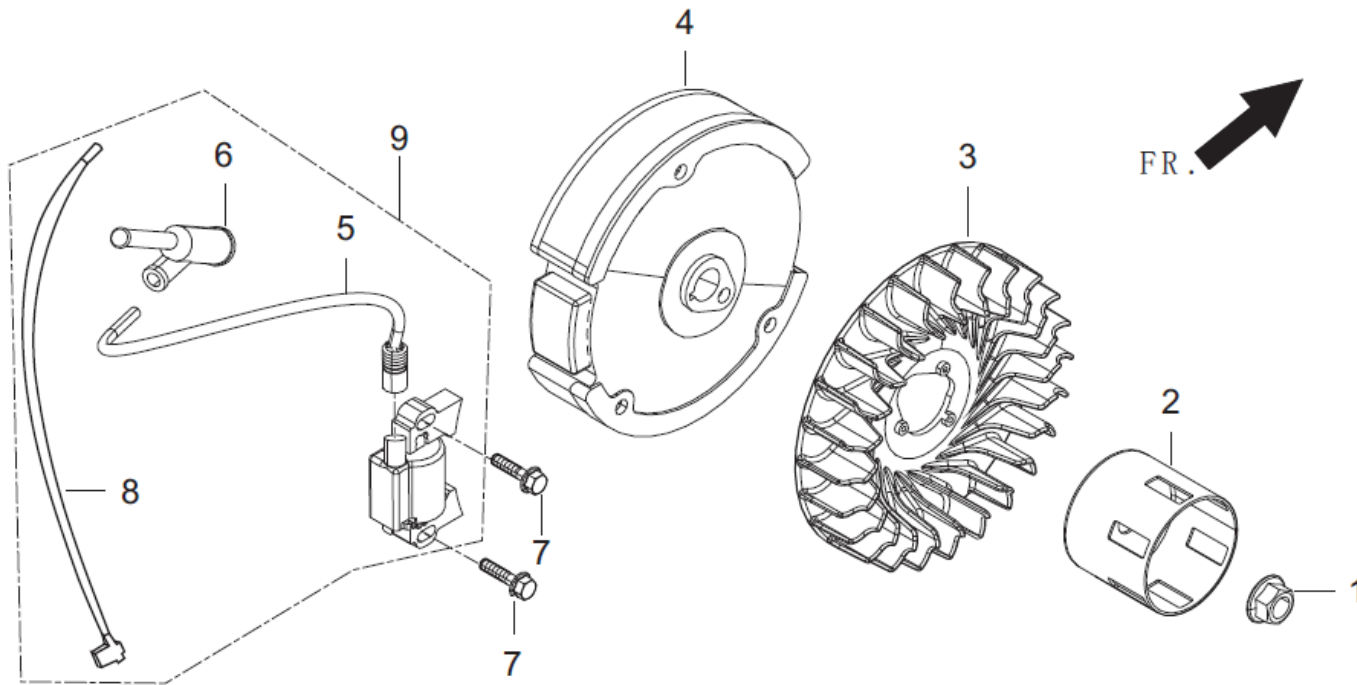


POS.	CODE	DESCRIPTION	QTY
E13-1	A08420	FLYWHEEL NUT	1
E13-2	A08618	STARTER PULLEY	1
E13-3	A08619	IMPELLER	1
E13-4	A08429	FLYWHEEL	1
E13-7	A08502	BOLT	2
E13-9	A13029	IGNITION COIL	1

E14

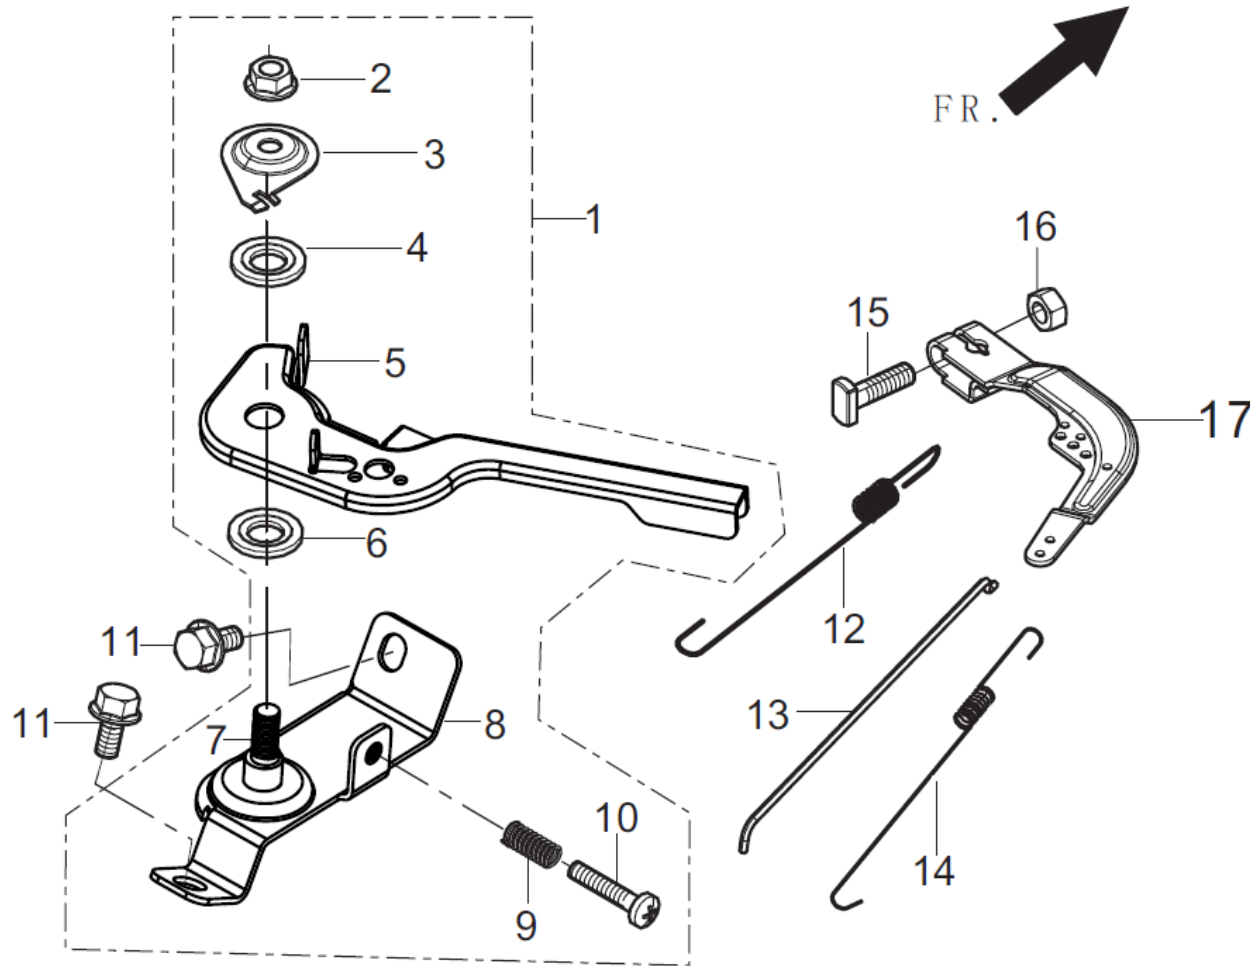

POS.	CODE	DESCRIPTION	QTY
E14-1	A13044	THROTTLE CONTROL ASSEMBLY	1
E14-11	A08494	BOLT	2
E14-12	A13019	GOVERNOR SPRING	1
E14-13	A09927	GOVERNOR ROD	1
E14-14	A08509	THROTTLE VALVE RETURNING SPRING	1
E14-15	A12999	GOVERNOR SUPPORT BOLT	1
E14-16	A13051	NUT	1
E14-17	A08504	GOVERNOR BRACKET	1


E15

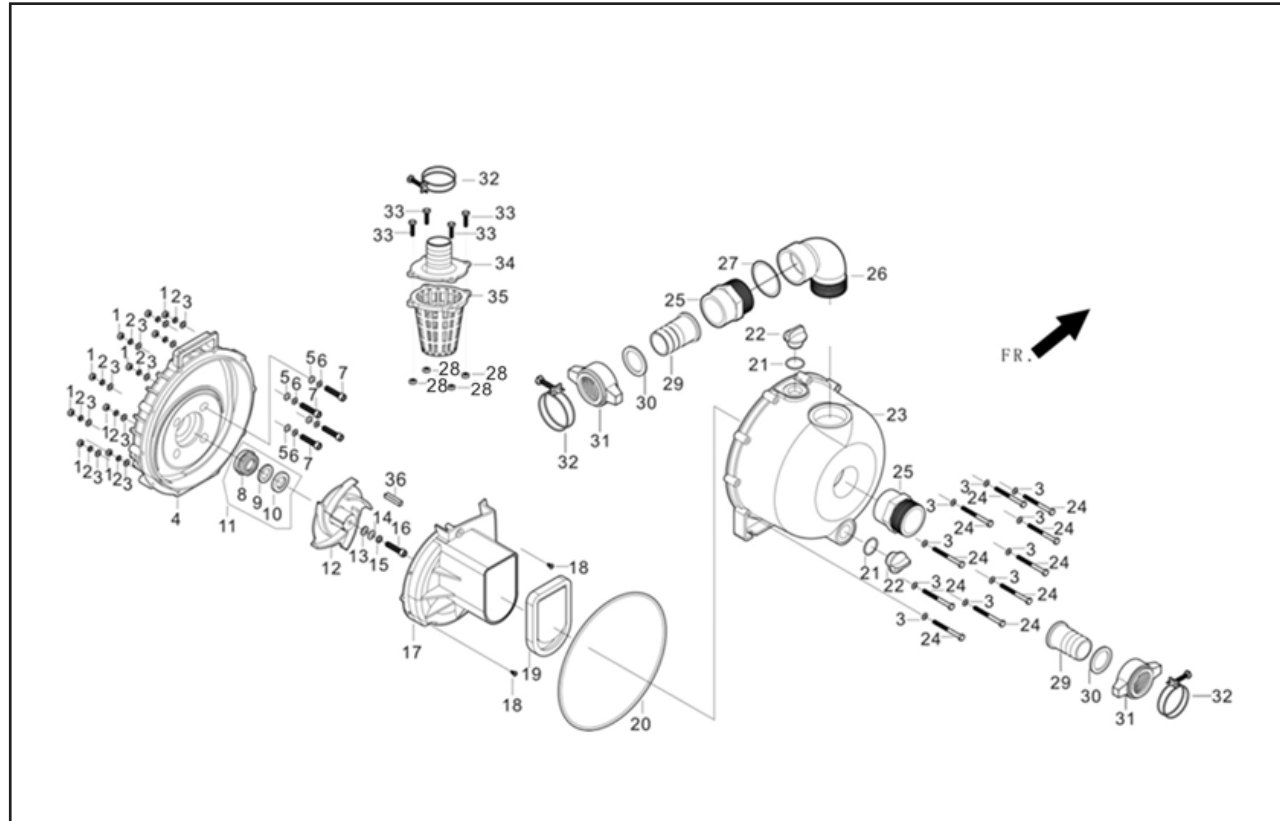

37

POS.	CODE	DESCRIPTION	QTY
E15-1	A11019	NUT	10
E15-2	A10603	WASHER	10
E15-3	A09034	WASHER	20
E15-4	A10997	WATER PUMP JOINT	1
E15-5	A11277	SEAL WASHER	4
E15-6	A11281	WASHER	4
E15-7	A11155	SCREW	4
E15-8	A11170	MECHANISM SEAL	1
E15-9	A11184	PORCELAIN SEAL	1
E15-10	A11140	IMPELLER SEAL RING	1
E15-11	A11169	MECHANISM SEAL SET	1
E15-12	A10952	WATER PUMP IMPELLER	1
E15-13	A11283	SEAL WASHER	1
E15-14	A11284	FLAT WASHER	1
E15-15	A11280	WASHER	1
E15-16	A10723	BOLT	1
E15-17	A10751	WHORL CASE	1
E15-18	A11157	SCREW	2
E15-19	A10904	INLET WATER GASKET	1
E15-20	A10820	WATER PUMP JOINT CUSHION	1
E15-21	A11297	SCREW PLUG WASHER	2
E15-22	A11077	THREAD PLUG	2
E15-23	A11105	PUMP BODY	1
E15-24	A10721	BOLT	10
E15-25	A10961	WATER INLET	2
E15-26	A11035	WATER OUTLET	1
E15-27	A11132	HOSE JOINT SEAL RING	1
E15-28	A10278	NUT	4
E15-29	A10973	HOSE INTERFACE	2
E15-30	A11132	HOSE JOINT SEAL RING	2


E15

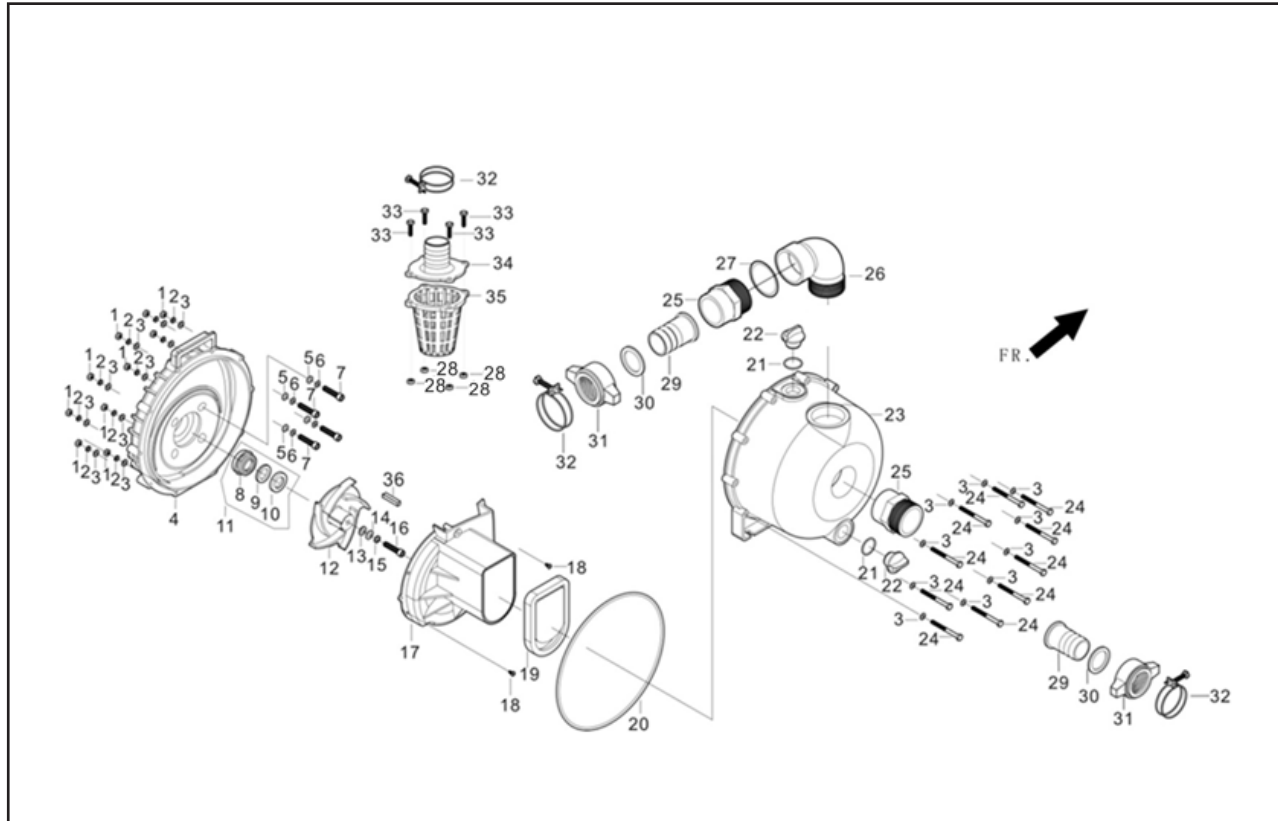

37

POS.	CODE	DESCRIPTION	QTY
E15-31	A10987	HOSE JOINT	2
E15-32	A10935	HOSE HOOP	3
E15-33	A10680	BOLT	4
E15-34	A10795	FILTER COVER	1
E15-35	A10840	FILTER	1
E15-36	A11326	KEY	1
E15-37	A11094	WATER PUMP ASSEMBLY	1

E16

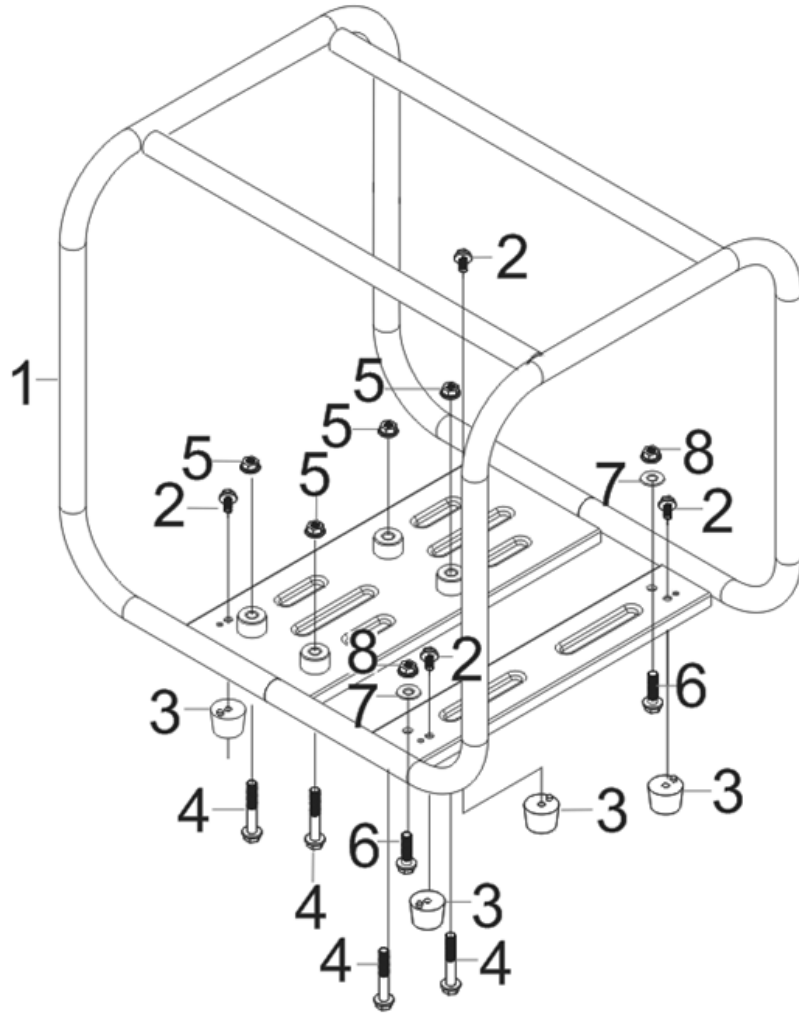

POS.	CODE	DESCRIPTION	QTY
E16-1	A10854	ENGINE FRAME ASSEMBLY	1
E16-2	A08494	BOLT	4
E16-3	A11185	ENGINE FRAME SHOCK ABSORPTION SEAT	4
E16-4	A08600	BOLT	4
E16-5	A11017	NUT	4
E16-6	A09026	BOLT	2
E16-7	A08548	WASHER	2
E16-8	A11017	NUT	2